


# FRONT WINGS - USER MANUAL

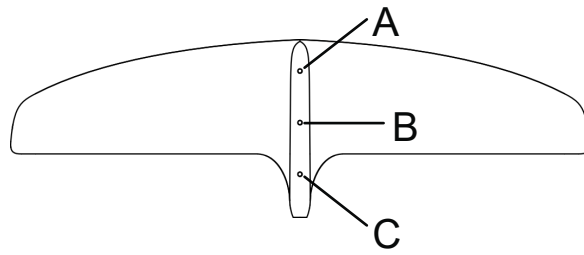

CODE	TECNICAL INFO	FUSELAGE TYPE	SCREW KIT	SCREW A	SCREW B	SCREW C	SCREW TORQUE
<b>LEVIATHAN</b>							
WL950	Front Wing 950 1300 cm <sup>2</sup> - AR 6,68	T8	MH163	M8x35	M8x40	M8x35	25 Nm
WL1150	Front Wing 1150 1580 cm <sup>2</sup> - AR 8,37	T8	MH163	M8x35	M8x40	M8x35	25 Nm
WL1350	Front Wing 1350 1870 cm <sup>2</sup> - AR 9,75	T8	MH163	M8x35	M8x40	M8x35	25 Nm
WL1550	Front Wing 1550 2140 cm <sup>2</sup> - AR 11,3	T8	MH163	M8x35	M8x40	M8x35	25 Nm
WL1750	Front Wing 1750 2400 cm <sup>2</sup> - AR 12,7	T8	MH163	M8x35	M8x40	M8x35	25 Nm
<b>MEDUSA</b>							
WM699	Front Wing 699 880 cm <sup>2</sup> - AR 5,75	T8	MH134	M8x30	M8x35	M8x30	25 Nm
WM799	Front Wing 799 1100 cm <sup>2</sup> - AR 5,8	T8	MH134	M8x30	M8x35	M8x30	25 Nm
WM899	Front Wing 899 1383 cm <sup>2</sup> - AR 5,8	T8	MH135	M8x35	M8x35	M8x30	25 Nm
WM999	Front Wing 999 1747 cm <sup>2</sup> - AR 5,71	T8	MH135	M8x35	M8x35	M8x30	25 Nm
<b>ONDA</b>							
WO730	Front Wing 730 1050 cm <sup>2</sup> - AR 5,00	T8	MH135	M8x35	M8x35	M8x30	25 Nm
WO835	Front Wing 835 926 cm <sup>2</sup> - AR 7,53	T8	MH133	M8x30	M8x30	M8x30	25 Nm
WO940	Front Wing 940 1100 cm <sup>2</sup> - AR 8,00	T8	MH133	M8x30	M8x30	M8x30	25 Nm
WO945	Front Wing 945 1300 cm <sup>2</sup> - AR 6,90	T8	MH133	M8x30	M8x30	M8x30	25 Nm

CODE	TECNICAL INFO	FUSELAGE TYPE	SCREW KIT	SCREW A	SCREW B	SCREW C	SCREW TORQUE
<b>BLADE</b>							
WB671	Front Wing 671 570 cm <sup>2</sup> - AR 7,80	T6	MH130	M6x25	M6x25	M6x20	11 Nm
WB740	Front Wing 740 702 cm <sup>2</sup> - AR 8,34	T6	MH118	M6x20	M6x25	M6x20	11 Nm
WB800	Front Wing 800 840 cm <sup>2</sup> - AR 7,60	T6	MH130	M6x25	M6x25	M6x20	11 Nm
WB1000	Front Wing 1000 987 cm <sup>2</sup> - AR 10,10	T6	MH130	M6x25	M6x25	M6x20	11 Nm
<b>RAZOR</b>							
WR680	Front Wing 680 550 cm <sup>2</sup> - AR 8,40	T6	MH161	M6x25	M6x30	M6x25	11 Nm
WR780	Front Wing 780 631 cm <sup>2</sup> - AR 9,64	T6	MH161	M6x25	M6x30	M6x25	11 Nm
WR820	Front Wing 820 746 cm <sup>2</sup> - AR 8,84	T6	MH161	M6x25	M6x30	M6x25	11 Nm
WR880	Front Wing 880 843 cm <sup>2</sup> - AR 9,20	T6	MH161	M6x25	M6x30	M6x25	11 Nm
WR980	Front Wing 980 938 cm <sup>2</sup> - AR 10,23	T6	MH161	M6x25	M6x30	M6x25	11 Nm
<b>TORTUGA</b>							
WT633	Front Wing 633 1250 cm <sup>2</sup> - AR 3,3	T8	MH123	M8x35	M8x35	M8x35	25 Nm
WT790	Front Wing 790 1550 cm <sup>2</sup> - AR 4,3	T8	MH134	M8x30	M8x35	M8x30	25 Nm
WT1100	Front Wing 1100 2100 cm <sup>2</sup> - AR 5,7	T8	MH134	M8x30	M8x35	M8x30	25 Nm
WT1250	Front Wing 1250 2400 cm <sup>2</sup> - AR 6,5	T8	MH134	M8x30	M8x35	M8x30	25 Nm
<b>CERTIFIED FRONT WINGS</b>							
W590Y	Front Wing 590Y 650 cm <sup>2</sup> - AR 5,2	T6	MH118	M6x20	M6x25	M6x20	11 Nm
W670	Front Wing 670 570 cm <sup>2</sup> - AR 7,8	FKR604 ONLY	MH117	M6x20	M6x20	M6x16	11 Nm



**SCAN HERE**

CHECK THE  
LATEST VERSION  
OF SABFOIL  
USER MANUALS